

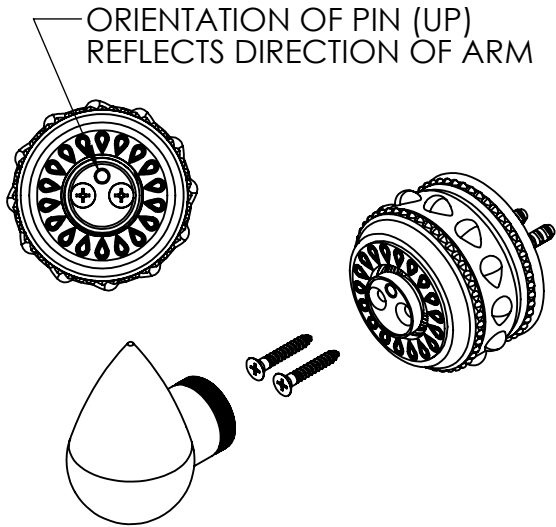



ACCESSORY HOOK
A-SE-003-00

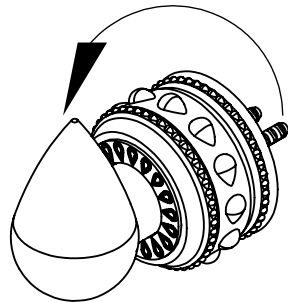

STEP 1
WITH SCREWS HORIZONTLY ALIGNED
SCREW ESCUTCHEON TO WALL

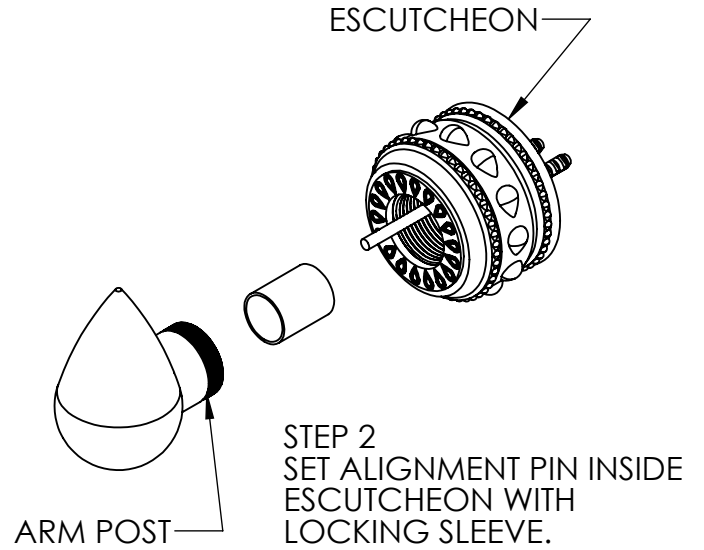

STEP 3
ALIGN ARM POST TO PIN AND TURN
ESCUTCHEON COUNTERCLOCKWISE TO
TIGHTEN ARM POST TO ESCUTCHEON.

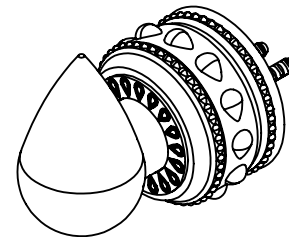

STEP 4
CLEAN ALL SURFACES OF
FINGERPRINTS WITH
POLISHING CLOTH